



A

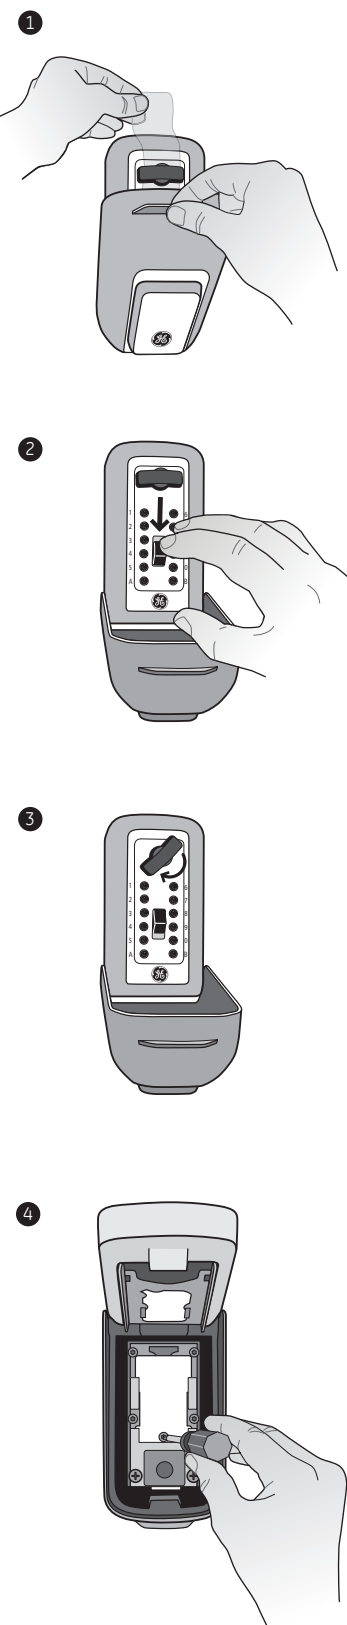


B




C

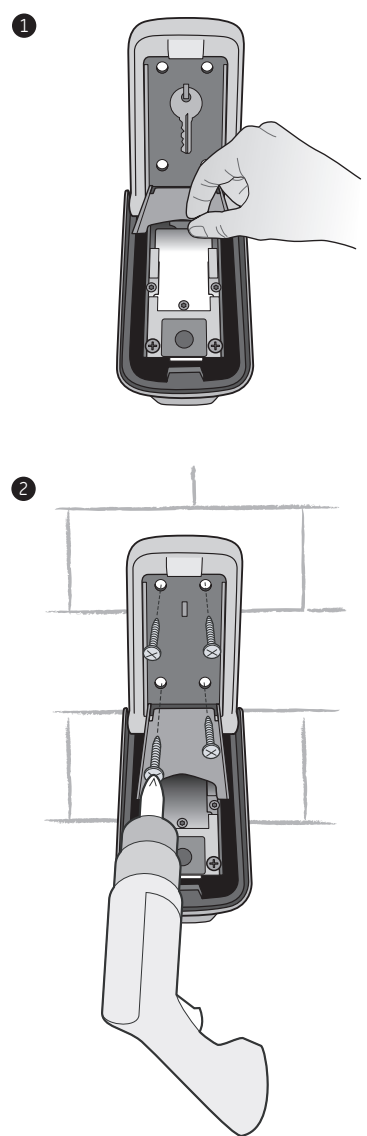

D

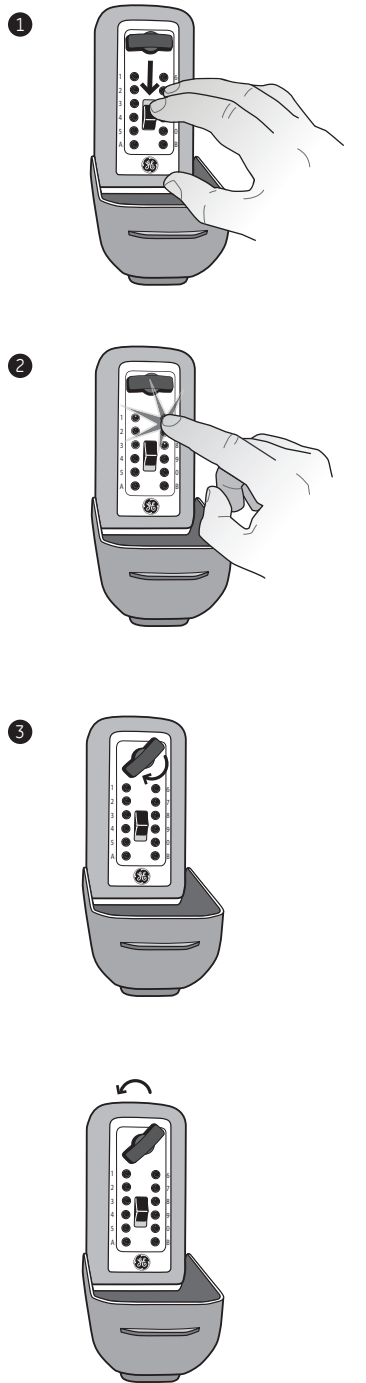

E

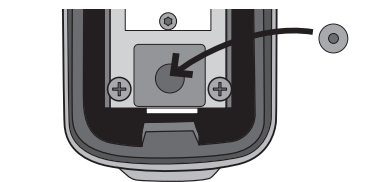

EN Installation Instructions

See pictures for step-by-step instructions. Further information is provided below.

= Enter the combination.

A. Setting your combination

- There is no preset combination on your KeySafe P500. Select your own combination. Each number/letter can only be used once.
 - Do not use a combination that can be easily guessed.
 - Use five to seven digits in your combination.
- Hold the plastic tab and pull open the weather cover.
 - Press down on the CLEAR button.
 - Then turn the OPEN lever clockwise 180° to open the lid.
 - Use a screwdriver to remove the screw from the code tamper plate.
 - Slide the tamper plate towards the hinge of the KeySafe, pull out the plate and remove the plastic card from the key cover.
 - There are ten numbered buttons and two lettered buttons with arrows on the back of the lid. Arrows pointing down are not set as part of the combination. Arrows pointing up are set and are part of the combination.
- With the KeySafe open, turn the open lever counter clockwise 180°, back to the locked position.
- Important!** The OPEN lever must be in LOCKED position before the code can be changed. Forcing the setting buttons when in the OPEN position may damage the KeySafe and void the warranty.
 - Use the code change tool on the plastic card to set the combination. To add a number or letter to the code, use the code change tool to push in the grooved arrow by the number/letter you wish to set. Turn 180° until the arrow pops back up completely and the arrow points in the ON direction. To remove a number or letter from the code, use the code change tool to push in the grooved arrow by the number/letter you wish to set. Turn 180° until the arrow pops back up completely and the arrow points in the OFF direction.
 - Replace the plastic card on the key cover, place the code tamper plate over the back of the lid and slide into place. Secure with the anti-tamper screw if you want to make the combination tamper resistant.

B. Testing your combination

- Make sure OPEN lever is in the locked position. If not, turn OPEN lever counter-clockwise until it's in the locked position. On the front of the KeySafe, press only the buttons in your combination. Press each button in until it clicks. If you press the wrong button, push down on the clear button and enter your code again.
- Turn the OPEN lever clockwise 180° to open. If the combination is set correctly, the OPEN lever will turn fully and the locking bolt will retract. If not, push down the CLEAR button and refer to section A. Setting your combination.

C. Mounting the KeySafe P500

(Note – use both US and metric (what's this mean??))

Masonry Screw Installation:

- Use the drill template to position the holes so they are as close to the center of the brick as possible. Do not install screws into mortar.
- Use the drill template to drill 4 mounting holes using a Tapcon xxx drill bit, to a depth of at least ¼" deeper than the length of the screw.
- If using the optional alarm sensor refer to installation instructions below.
- Clean out dust and debris from all holes.
- Position the KeySafe on the 4 holes and drive the screws directly into the brick.
- Tighten the screws until they are snug against the back of the KeySafe. Be careful not to over tighten the screws.

Wood Screw Installation:

- Use the drill template to position the holes so at least 2 screws are driven into wall framing or solid wood.
- It is recommended to drill pilot holes to mount for straight mounting of the KeySafe. Use the drill template to drill 4 pilot holes 1" deep using a 1/16" wood drill bit.
- If using the optional alarm sensor refer to installation instructions below.

DE Installationsanleitung

Nachfolgend wird Ihnen schrittweise die Handhabung des KeySafes erklärt.

= Eingabe der Zahlenkombination.

D. Opening and Closing your KeySafe

- Press down on the CLEAR button.
- Enter the combination in any order. If you have entered an incorrect combination, press down on the CLEAR button to reset the buttons.
- Turn the OPEN lever clockwise 180° to open. When you turn the lever, the combination will clear.
- To relock, close the lid and turn the OPEN lever counter-clockwise 180°. When you release the lever, the KeySafe is locked.

E. Optional Alarm Sensor Installation

- Use the drill template to drill a 3/8" hole through the wall so the wiring can be routed to the alarm system.
- Insert alarm sensor wires through the hole so they pass through to the inside of the wall. Carefully push the alarm sensor into the wall until it is flush with the surface of the wall.
- Connect the sensor to your alarm system per your alarm system instructions. If you are not familiar with your alarm system, we recommend you contact the company that installed your alarm to correctly configure the sensor.
- If you purchased the alarm sensor separately, locate the small, round magnet that came with the sensor. Attach the adhesive sticker to the back of the magnet and then remove the paper from the tape on the back of the magnet and stick the magnet into the hole according to figure E.
- Configure your alarm for the sensor and then open and close the KeySafe. Check your alarm system to make sure the sensor is working properly.

Accessories/Replacement Parts

Item	Part #
Alarm switch	R1075-N (US) ##### (Europe)
Weather cover	10102726P1
Code tamper plate	10102703G1
Wood mounting kit	10102699G1
Masonry mounting kit	10102698G1
Key Cover	10102725P1

Limited Warranty


GE Security warrants that this product will be free of defects in material and workmanship for one year from the date of purchase. This warranty is limited to repair or replacement at GE Security's option. This warranty does not cover forgotten or incorrectly set combinations. Damage caused by modification, abuse or misuse, wear and tear, improper installation, application, storage, or fault or negligence of a party other than GE Security are not covered. GE Security will not be responsible for labor costs of removal or reinstallation of products. The repaired or replaced product is then warranted under the terms of this limited warranty for the balance of the term of the warranty or for 90 days, whichever is longer. GE SECURITY MAKES NO OTHER WARRANTY, EXPRESS OR IMPLIED, OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL GE SECURITY BE LIABLE FOR LOSS OF USE, LOST PROFITS, THEFT, PROPERTY DAMAGE, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES. To obtain repair or replacement information under the terms of this warranty, please contact your local supplier.





Notice d'installation

Suivez les illustrations pour des instructions détaillées.
Vous trouverez des informations complémentaires
ci-dessous.

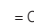 = Composer le code.



Istruzioni d'installazione


Guarda le immagini per le istruzioni passo a passo.
Ulteriori informazioni sono fornite più in basso.

 = Inserisci la combinazione.



Instrucciones de Instalación

Fijese en las imágenes para seguir las
instrucciones paso a paso. A continuación se
proporciona información adicional.

 = Introducir la combinación.



Installatie instructies


Zie afbeeldingen voor stap-voor-stap instructies.
Verdere informatie wordt hieronder verstrekt.

 = Geef de code in.



Installationsvejledning


Se billeder i trin-for-trin vejledning. Yderligere information findes nedenfor.

 = indtast koden.



Instruções de instalação


Veja as imagens para instruções passo-a-passo. Mais abaixo é fornecida informação adicional.

 = Introduza a combinação.



Installasjons veiledning


Se bilder for veiledning steg for steg. Ytterligere informasjon, se lengre ned i veiledningen.

 = Tast inn kode.



Installations instruktioner

Se bilderna för steg-för-steg instruktioner. Vidare information finns beskriven nedan.

 = Fyll in kombinationen.

FI Asennusohje

Kuvissa esitetään asennusvaiheet askel askeleelta.
Lisätietoja ohjeen lopussa.

 = Näppäile käyttökoodi.

IS Notkunar leiðbeiningar

Sjá myndir um uppsetningu og stillingu. Nánari
upplýsingar eru hér að neðan.

 = Innsláttur talnakóða.

KeySafe™ P500

Mounting Template

